

LINA DAC X

User Guide

Your guide to LINA

This User Guide is designed to help you experience the full potential of your dCS LINA DAC X.

Inside, you'll find advice on how to set up, install, use and care for your system. We ask that you read it carefully before getting started. If you require further information or support, you can contact us at dcsaudio.com/contact.

We hope you enjoy listening, and are delighted to welcome you to the dCS community.

Document information

Published on: 20/05/2025

Document ID: DCS325671 - Rev 1

Copyright

Copyright © 2025 Data Conversion Systems Ltd. All Rights Reserved.

Information contained in this manual is subject to change without notice, and whilst it is checked for accuracy, no liabilities can be accepted for errors.

dCS Expanse® is a registered trademark of Data Conversion Systems Ltd.

dCS is Data Conversion Systems Ltd. Company registered in England No. 2072115.

Other product and company names may be trademarks or registered trademarks of other companies, and are the property of their owners. They are used only for explanation, without intent to infringe.

Intended purpose

This document advises users how to set up, use and configure the product.

Contents


Getting started	6
What's in the box	6
Where to place the LINA DAC X	6
Recommended cables and connectors	7
Digital inputs	7
Analogue outputs	7
Overview	8
Front	8
Display	9
Status icons	10
Rear	10
Analogue outputs	11
Digital inputs	11
AES digital inputs	11
SPDIF digital inputs	12
USB sockets	12
Word clock inputs	12
Network socket	13
Setting up	14
Connecting the power supply	14
Switching the unit on and off	14
Using sleep mode	15
Connecting audio source equipment	15
Connecting a single AES or SPDIF input	15
Connecting a Dual AES input	16
Connecting integrated amplifiers and preamplifiers	16
Connecting to your network	17
Connecting a computer	18
Selecting LINA DAC X as the audio output device on your computer	19
macOS™	19
Windows™ 10 and Windows™ 8.1	19
Clocking	19
Using the unit in Master mode	20
Using the unit in Audio sync mode	20
Locking the unit to a Master Clock	20
Using Power Link	20
Using the dCS remote control	21
Inserting the remote control batteries	21
Remote control buttons	21
dCS Mosaic	23
Using the LINA DAC X	24
Changing the source input	24
Playing music from streaming services	24
About MQA files	25
Using Spotify Connect	26
Using Room	26

Using TIDAL Connect	26
Using QQ Music	27
Playing music from a USB storage device	27
Settings	28
Navigating the menu	28
Menu overview	29
Changing the shortcut buttons	30
Changing the crossfeed setting	30
Changing the PCM filter	31
Changing the DSD filter	32
Changing the upsampling mode	32
Changing the mapper	33
Changing the absolute phase of analogue outputs	33
Adjusting the balance	34
Unlocking and locking volume control	34
Setting the clocking sync mode	34
Enabling and disabling Dual AES	35
Setting the USB audio class	36
Enabling and disabling the buffer	36
Changing the line output level	36
Changing the text size	37
Turning off the display	37
Changing the display brightness	37
Changing the infrared remote control settings	38
Resetting to factory conditions	38
Testing for swapped channels	39
Conditioning the unit	39
Viewing information about the unit	40
Updating the software	40
Maintenance	41
Replacing a blown mains fuse	41
Cleaning the unit	42
Specifications	43
Support	47


Getting started

What's in the box


The box contains the following items:

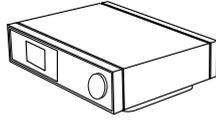


dCS LINA DAC X

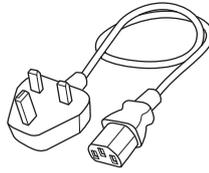


Power cable (2m)

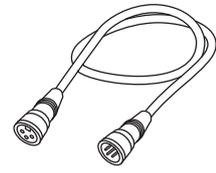


2x XLR cable (0.5m)

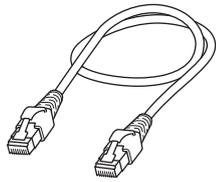


Ethernet cable (2m)

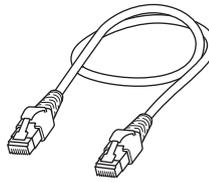

Power Link cable (0.5m)

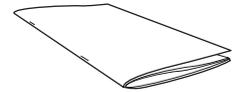


Safety and Compliance Guide

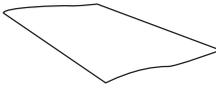

Welcome letter



Display cleaning cloth

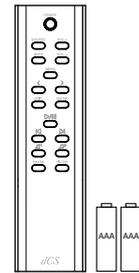

Remote Control and 2 x AAA batteries

If an item is missing from the box, contact your fulfilment centre.



We recommend that you keep the original packaging of the unit. If you need to order replacement packaging, contact your fulfilment centre.

Where to place the LINA DAC X

To get the best sound quality:

- Ensure you can easily connect LINA DAC X to other units of your system.
- Place the unit on a firm, vibration-free base.



To prevent overheating, we recommend that you leave some space around the unit to allow for ventilation.

Recommended cables and connectors

We recommend the following cables and connectors for use with the unit. We supply "commercial" cables with the unit, but you can use cables and connectors of your preferred quality.

NOTICE

Heavy or inflexible power cables may damage the power socket on the unit.



Some "audiophile" cables have unusual grounding or screening arrangements, or they don't have the correct characteristic impedance. If you have difficulty using such cables but the problem disappears when you use standard cables, contact your cable manufacturer.

Digital inputs

Input	Recommended cable and connector
AES / EBU	110 Ω screened, twisted pair cables fitted with one male 3 way XLR connector and one female 3 way XLR connector.
Word Clock / SPDIF BNC	75 Ω coax cables fitted with BNC connectors.
SPDIF RCA	75 Ω coax cables fitted with RCA phono connectors.
Toslink	Toslink fibre-optic cables.
Network	RJ45 Ethernet cable.
USB	Standard screened USB 2.0 cable fitted with one type 'A' connector and one type 'B' connector. The internal screen must be connected at both ends.




The Word Clock sockets require a simple DC-coupled connection. If you use capacitor-coupled cables or cables with built-in networks, the interfaces may not work correctly.

Analogue outputs

Output	Recommended cable and connector
Balanced output	Screened, twisted pair cables fitted with one male 3 way XLR connector and one female 3 way XLR connector.
Unbalanced outputs	Coax cables fitted with RCA phono connectors.

Overview

Front

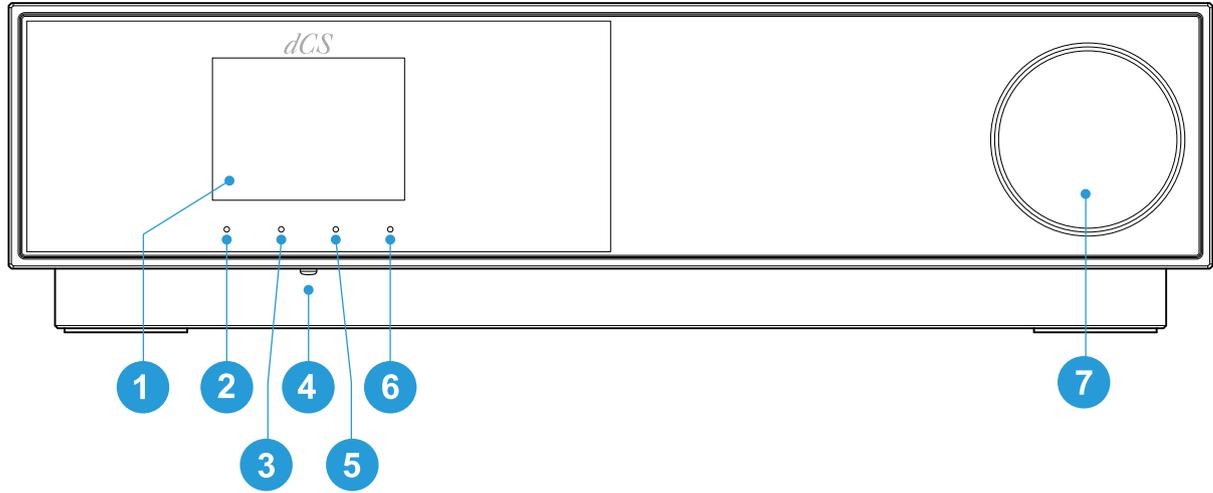


Item	Description
1 Display	Displays menus and information about the current input, for example, track name and artist.
2 Touch button	Tap to select the option shown in the display above the button. <ul style="list-style-type: none"> On the home screen, tap to use the assigned shortcut. In a menu, tap to move up a level or exit the menu.
3 Touch button	Tap to select the option shown in the display above the button. <ul style="list-style-type: none"> On the home screen, tap to use the assigned shortcut. In a menu, tap to go to the previous page.
4 Power button	To switch on or enter sleep mode, press briefly. To switch off, press and hold until POWER OFF is displayed.
5 Touch button	Tap to select the option shown in the display above the button. <ul style="list-style-type: none"> On the home screen, tap to use the assigned shortcut. In a menu, tap to go to the next page.
6 Touch button	Tap to select the option shown in the display above the button. <ul style="list-style-type: none"> On the home screen, tap to open the main menu. Touch and hold to change the function of the three shortcut buttons. In a menu, tap to select a menu item or change a setting.
7 Volume control	Rotary volume control. <ul style="list-style-type: none"> Turn clockwise to increase volume. Turn anti-clockwise to decrease volume.



You can assign your favourite settings to the three shortcut buttons on the home screen.

► For more information, see "Changing the shortcut buttons" on page 30.

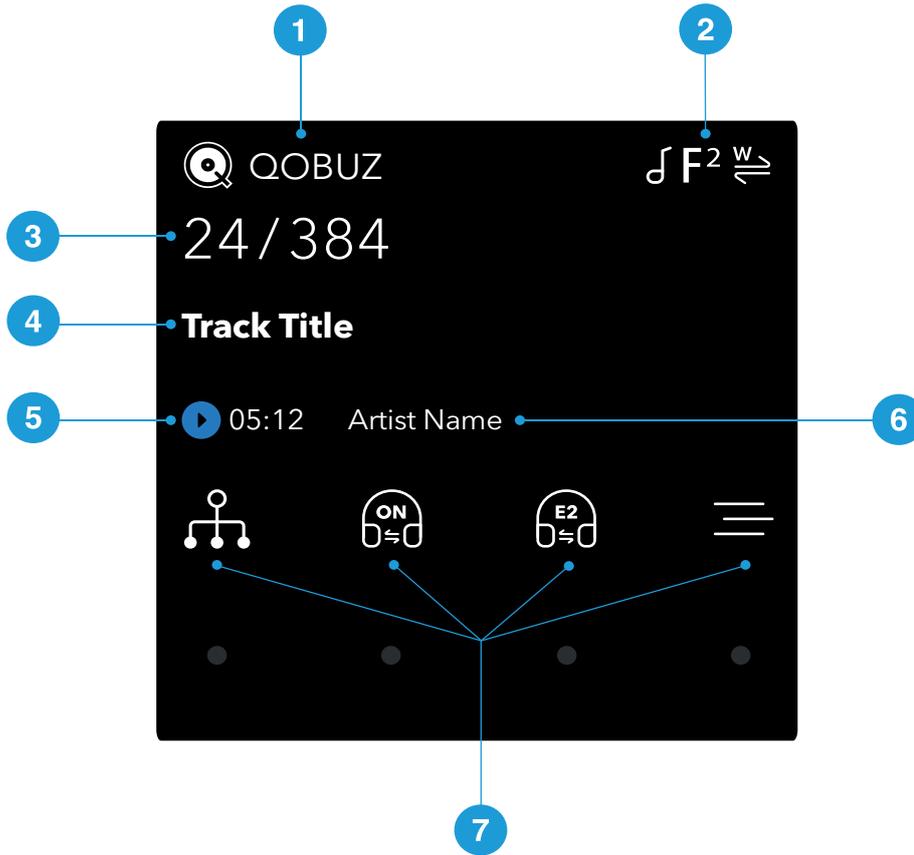

Description	
1	Input source
2	Status icons ▶ For more information, see "Status icons" on the next page.
3	Data rate (word length and sample rate for PCM, or DSD or DSDx2)
4	Track title*
5	Play/Pause icon and track elapsed time*
6	Artist name*
7	Menu, settings and shortcuts. To select the option, tap the relevant touch button. If an option is not available, the icon is greyed out.


*Displayed only when streaming from network or USB2

Status icons

Status icons are shown in the top-right of the home screen.

Icon	Description
F1	Filter setting when receiving PCM data
F1 DSD	Filter setting when receiving DSD data
M	Clocking sync mode: Master
A	Clocking sync mode: Audio
W / W1 / W2	Clocking sync mode: Word Clock (Auto, 1 or 2)
∩	Phase is normal
∩	Phase is inverted

Rear

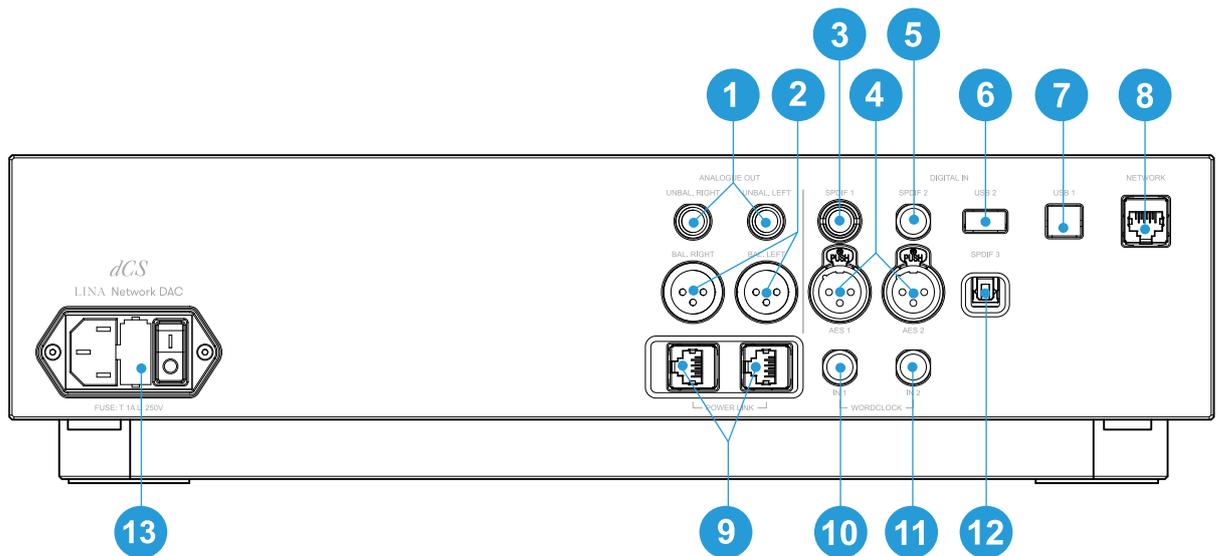

Item	Description
1 UNBAL. LEFT UNBAL. RIGHT	Stereo unbalanced RCA analogue outputs. Connects the unit to an integrated amplifier or preamplifier.
2 BAL. LEFT BAL. RIGHT	Stereo balanced XLR analogue outputs. Connects the unit to an integrated amplifier or preamplifier.
3 SPDIF 1	RCA digital input. Connects the unit to a digital audio source.
4 AES 1 AES 2	XLR digital inputs. Connects the unit to a digital audio source, such as a CD transport or upsampler.
5 SPDIF 2	BNC digital input. Connects the unit to a digital audio source, such as a CD transport or upsampler.

Item	Description
6	USB 2 USB-A digital input. Connects the unit to a USB flash drive.
7	USB 1 USB-B digital input. Connects the unit to a computer or sound server.
8	NETWORK RJ45 network input. Connects the unit to the local network or the Internet.
9	POWER LINK RJ45 input. Connects the unit to other LINA units to enable Power Link. ▶ For more information, see "Using Power Link" on page 20.
10	WORDCLOCK IN 1 Word clock input 1. A 75 Ω BNC connector. Connects the unit to an external clock. Word clock is only used for synchronisation and does not carry digital audio data.
11	WORDCLOCK IN 2 Word clock input 2. A 75 Ω BNC connector. Connects the unit to an external clock. Word clock is only used for synchronisation and does not carry digital audio data.
12	SPDIF 3 Fibre optic Toslink input. Connects the unit to a digital audio source, such as a satellite receiver.
13	Power socket, fuse, and power switch Power is connected via a standard IEC320 connector, with a power switch and a fuse holder.

Analogue outputs

The balanced and unbalanced outputs on the unit are independent, which allows you to connect each output to a different amplifier.

Connect balanced outputs to true balanced inputs only. The outputs are electronically balanced and floating, which reduces hum or interference picked up by the cable. There are three connections:

- Pin 1: Screen / ground
- Pin 2: Signal +
- Pin 3: Signal -



The balanced outputs do not work correctly when they are connected to an unbalanced input.

Digital inputs

AES digital inputs

The AES 1 and AES 2 inputs individually accept PCM data at up to 192 kS/s, or DSD/64 in DoP format.

If Dual AES is enabled, you can use AES1 and AES2 together as a Dual AES pair. Dual AES supports the following data formats:

- PCM data (24/88.2 to 24/384)
- dCS-encrypted DSD data from Vivaldi, Rossini, Scarlatti, and Paganini Transports
- DoP data (DSD/64 or DSD/128 over PCM)

► For more information, see "Enabling and disabling Dual AES" on page 35.



Dual AES works correctly only when the source generates Dual AES data. It is not the same as single AES data connected to both AES1 and AES2.

SPDIF digital inputs

The SPDIF 1 and SPDIF 2 inputs accept PCM data at up to 192 kS/s, or DSD/64 in DoP format. SPDIF 3 is a Toslink optical receiver that accepts PCM data at up to 96 kS/s.

USB sockets

The USB 1 input is a galvanically isolated 'B' (USB Slave) type socket. It accepts audio data from a Windows™ PC, Apple Mac™, or sound server.

The USB 1 input can operate in two audio classes:

- Class 1, which accepts data at up to 96 kS/s.
 No additional drivers need to be installed on the connected computer.
- Class 2, which accepts data at up to 384 kS/s, or DSD/64 or DSD/128 in DoP format.
 No additional driver needs to be installed on Apple desktops and notebooks running macOS 10.6.3 or later.

No additional driver needs to be installed on computers running Windows™ 10 or later.

On Windows™ 7, 8 and 8.1, the dCS USB Class 2 audio driver needs to be installed. If you require the dCS USB Class 2 audio driver, contact dCS support at support@dcsaudio.com.



The USB 1 input has been tested with various PCM streaming programs on Windows™ 10 and macOS 13.2. However, USB audio connectivity may not be available with all devices, operating systems, or software.

► For more information, see "Setting the USB audio class" on page 36.

The USB 2 input is an 'A' type (USB Host) socket. It supports PCM audio files in formats at up to 24 bits / 384 kS/s or DSD/128. Any device used with the USB 2 input should comply with the following specification:

Both USB sockets work in true asynchronous USB mode, which ensures the unit is not affected by clock jitter from connected devices.

Word clock inputs

The WORDCLOCK IN 1 and WORDCLOCK IN 2 sockets accept standard word clock at 44.1, 48, 88.2, 96, 176.4 or 192 kHz from a Master Clock or the source equipment.

The unit can only lock when the clock frequency is the same as the data rate, or an exact multiple of the data rate.

The sockets are used only for synchronisation and do not carry digital audio data.

Network socket

The *NETWORK* socket is an RJ45 connection that allows you to stream music from the local network or the Internet. The unit streams music files at up to 24 bits / 384 kS/s, or DSD/64, or DSD/128. The network interface runs in asynchronous mode and is galvanically isolated.

NOTICE


The metal contacts of the *NETWORK* socket can be damaged by accidentally inserting the wrong connector. When the socket is not in use, replace the dust cover.

Setting up

Connecting the power supply

Use the supplied power cable to connect your LINA DAC X to the power supply.

1. At the rear of the unit, insert the power cable into the power socket.
2. Connect the plug to a power supply.

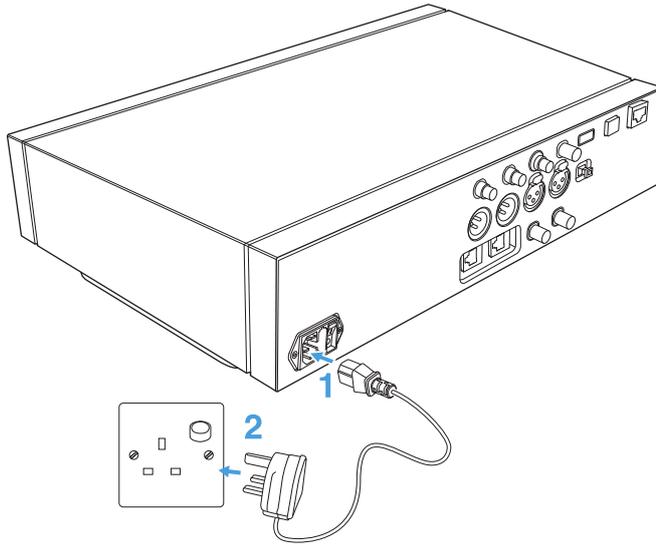


Switching the unit on and off


At the rear of the unit, there is a power rocker switch next to the power cable. There is also a power button on the front panel.

To switch on the unit:

1. On the rear of the unit, press the power rocker switch to the *I* position.

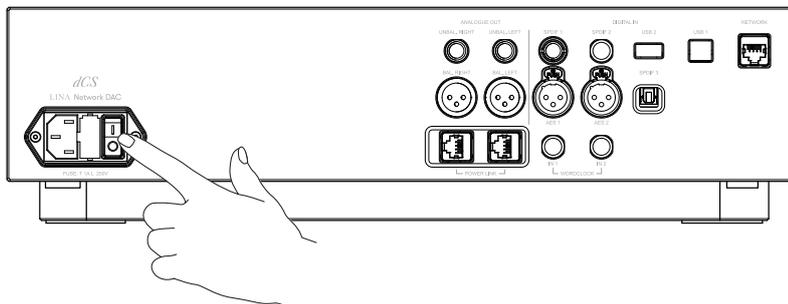

2. On the front of the unit, press the *Power* button.

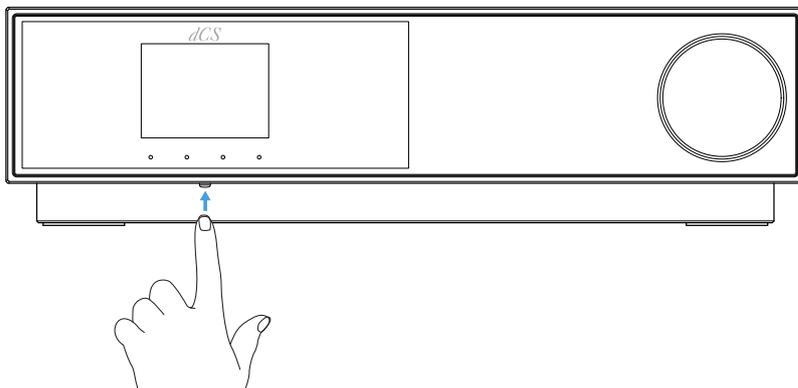

To switch off the unit:

- Press and hold the *Power* button until **POWER OFF** is displayed.

Using sleep mode

Sleep mode suspends the unit in its current state, but keeps it ready for quick use.

- To enter sleep mode, briefly press the *Power* button.
The display turns off.
- To exit sleep mode, press the *Power* button again.



To prevent screen burn-in of the display, switch the unit off or put it in sleep mode when not in use.

Connecting audio source equipment

You can use the input sockets on the rear of the LINA DAC X to connect audio equipment to the unit, for example, CD transports, DVD players, or upsamplers.

There are two types of input sockets on the unit:

- AES (Audio Engineering Society)
- SPDIF (Sony/Philips Digital Interface)



If you lock an AES or SPDIF input on the LINA Network DAC to the LINA Master Clock, the source equipment will not be locked to the Clock, resulting in periodic clicks, dropouts or distortion.

To use the LINA Network DAC in this way, use source equipment that has a word clock input and a Master Clock with extra outputs.

Connecting a single AES or SPDIF input

Most digital audio source equipment is fitted with at least one digital output, which is usually an RCA phono connector. Satellite receivers usually have a Toslink optical output.

1. At the rear of the LINA DAC X, connect a suitable cable to one of the following sockets:
 - AES 1
 - AES 2

- SPDIF 1
 - SPDIF 2
 - SPDIF 3
2. Connect the other end of the cable to the source equipment.
 3. Switch on the source equipment.
 4. If possible, play music on the source equipment to generate an audio signal.
 5. Change the source input on the unit.
 - ▶ For more information, see "Changing the source input" on page 24.

After you have selected the input, the display shows the bit rate and format of the current music.

Connecting a Dual AES input

Some audio equipment, for example, upsamplers or sound servers, can output in Dual AES. Dual AES features lower jitter than single AES or SPDIF.



Some audio equipment has two single AES outputs that carry identical data. This is not the same as Dual AES, and will be in mono if you set Dual AES mode manually. To avoid this, we recommend using the Auto setting for Dual AES.

1. Using XLR cables, connect your LINA DAC X to the source equipment. Ensure the cables are not swapped.
 - Connect the AES1 (or AES A) output on the source equipment to the AES 1 socket on the unit.
 - Connect the AES2 (or AES B) output on the source equipment to the AES 2 socket on the unit.
2. Switch on the source equipment.
3. If possible, play music on the source equipment to generate an audio signal.
4. Ensure that Dual AES is enabled on the unit.
 - ▶ For more information, see "Enabling and disabling Dual AES" on page 35.
5. Change the source input on the unit to **DUAL AES**.
 - ▶ For more information, see "Changing the source input" on page 24.

After you have selected the input, the display shows the bit rate and format of the current music.

Connecting integrated amplifiers and preamplifiers

You can connect your LINA DAC X to integrated amplifiers and preamplifiers. The unit has two types of analogue output connections: balanced and unbalanced. These outputs are independent, which allows you to connect each output to a different amplifier.

NOTICE

If you plan to directly connect your LINA DAC X to a power amplifier, unlock the volume control and reduce the volume level before setting up LINA DAC X with your system.

- ▶ For more information, see "Unlocking and locking volume control" on page 34.

 Connecting the unit's balanced output to an unbalanced input using an XLR cable is not recommended, as it results in hissing noises, unstable levels, and a thin sound.

1. Switch on the amplifier and set it to a low volume.
2. Connect cables to the rear of the unit.
 - If you are using the balanced outputs, connect XLR cables to the *BAL. LEFT* and *BAL. RIGHT* sockets.
 - If you are using the unbalanced outputs, connect RCA phono cables to the *UNBAL. LEFT* and *UNBAL. RIGHT* sockets.

3. Connect the other end of the cables to the amplifier.

 The inputs on the amplifier may be labelled CD or AUX.

4. Select the chosen input on the amplifier and play some music.

▶ For more information, see "Using the LINA DAC X" on page 24.

5. While music is playing, slowly increase the amplifier volume to the desired level.

Connecting to your network

If you connect your LINA DAC X to a network, you can stream content from local sources, such as a music server on your network, or from Internet services.

Before connecting the unit to your network, ensure you have the following items:

- A Wi-Fi network router with spare Ethernet sockets. To stream content from internet services, your router must be connected to the Internet.
- A mobile device with the Mosaic Control app installed.
 - ▶ For more information, see "dCS Mosaic" on page 23.
- Optional: A music server, such as a Network Attached Storage (NAS) server. The music server must be UPnP (Universal Plug and Play) compatible, and must be connected to the router via an Ethernet cable.


We fully test our products with the MinimServer UPnP server software. For more information about MinimServer, visit www.minimserver.com

 For more information about configuring your network, contact your local service centre or a local IT expert.

To connect your LINA DAC X to your network:

1. At the rear of the unit, connect an Ethernet cable to the *NETWORK* socket.
2. Connect the other end of the Ethernet cable to your router.
3. On your mobile device, connect to the same network as your router.
4. On your mobile device, open the Mosaic Control app and connect to your LINA DAC X.

 To stream from internet services, your router must be connected to the internet.

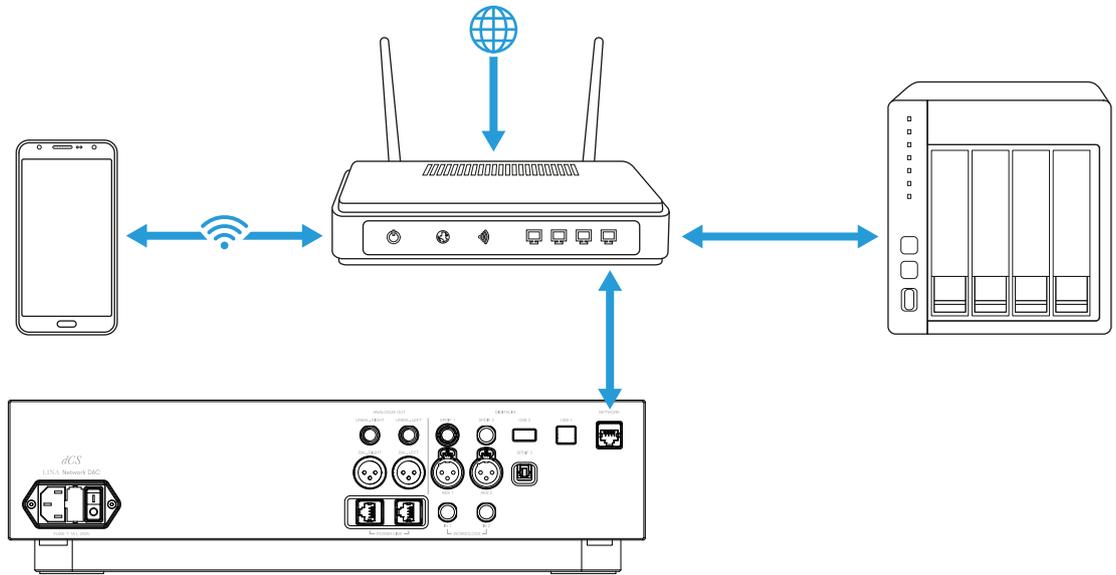

Connecting a computer

You can connect a computer to the **USB 1** socket on your LINA DAC X. For best results, we recommend using a premium music streaming program instead of software included with the operating system.

The **USB 1** input can operate in two audio classes:

- Class 1, which accepts data at up to 96 kS/s.
 No additional drivers need to be installed on the connected computer.
- Class 2, which accepts data at up to 384 kS/s, or DSD/64 or DSD/128 in DoP format.
 No additional driver needs to be installed on Apple desktops and notebooks running macOS 10.6.3 or later.
 No additional driver needs to be installed on computers running Windows™ 10 or later.
 On Windows™ 7, 8 and 8.1, the dCS USB Class 2 audio driver needs to be installed. If you require the dCS USB Class 2 audio driver, contact dCS support at support@dcsaudio.com.

💡 The **USB 1** input has been tested with various PCM streaming programs on Windows™ 10 and macOS 13.2. However, USB audio connectivity may not be available with all devices, operating systems, or software.

- ▶ For more information, see "Setting the USB audio class" on page 36.
 1. Using a USB cable, connect a computer to the **USB 1** socket on the rear of the unit.
 2. Change the source input on the unit to **USB / PC**.
 - ▶ For more information, see "Changing the source input" on page 24.
 3. In your streaming program, select the LINA DAC X as the output device.

Selecting LINA DAC X as the audio output device on your computer

To listen to music from your computer on the unit, you may need to change your preferred audio output device.

macOS™

1. Select **Finder**.
2. Select the **Go** tab.
3. Select **Utilities > Audio MIDI Setup**.
4. Use the right mouse button to select **dCS Lina Network DAC**.
5. Select **Use this device for sound output**.
6. To get the best sound quality, set the format to **384000.0Hz** and **2ch-24bit Integer**.
7. Close **Audio MIDI Setup**.

Windows™ 10 and Windows™ 8.1

1. Open the Control Panel and select **Sound**.
2. Select the **Playback** tab.
3. Use the right mouse button to select **dCS Lina Network DAC**.
4. Select **Set as Default Communication Device**.
5. To get the best sound quality:
 - a. Select **Properties**.
 - b. Select the **Advanced** tab.
 - c. Select **24 bit, 384000 Hz (Studio Quality)**.
 - d. In the **Exclusive Mode** options, select both options.
6. Close the **Sound** window.

Clocking

Clock jitter is variation in the digital audio clock frequency, which can cause a loss of fine detail when listening to music. The unit can run in different clocking sync modes, which can reduce jitter. To minimise jitter, connect the unit to the LINA Master Clock or a compatible Master Clock.

Clocking sync mode	Inputs	Description
Master (M) 	Network and USB	The unit uses its internal clock to control data delivery from the network, computer or flash drive.
Audio (A) 	AES and SPDIF	The unit locks to the data stream from the source equipment.
Word Clock • Auto (W)  • 1 (W1)  • 2 (W2) 	Network and USB AES and SPDIF	The unit locks to a Master Clock and controls data delivery from the network, computer or flash drive. The unit and the source equipment lock to a Master Clock. The source equipment's word clock input must be connected to a Master Clock output at the correct frequency.



The sync mode setting is stored separately for each input.

Using the unit in Master mode

When using the network or USB inputs, the unit automatically defaults to Master mode if a Master Clock is not connected. If you prefer, you can set these inputs to Master mode, ignoring any connection to the word clock inputs.

- ▶ For more information, see "Setting the clocking sync mode" on page 34.

Using the unit in Audio sync mode

When using the AES or SPDIF inputs, you can set the unit to lock to the data stream from the source audio equipment.

1. Switch on the unit.
2. Switch on the source audio equipment.
3. On the unit, choose the input you want to lock.
 - ▶ For more information, see "Changing the source input" on page 24.
4. Set the clocking sync mode on the unit to Audio.
 - ▶ For more information, see "Setting the clocking sync mode" on page 34.

Locking the unit to a Master Clock

To minimise jitter, you can lock the unit to a Master Clock. If the Master Clock has an available output, you can use it to also clock another audio source, such as a CD transport.

1. Switch on the unit and the Master Clock.
 2. On the unit, choose the input you want to lock to the Master Clock.
 - ▶ For more information, see "Changing the source input" on page 24.
 3. Using two BNC cables, connect the WORDCLOCK output sockets on the Master Clock to the WORDCLOCK input sockets on the unit.
 4. If you are also locking another audio source to the Master Clock, switch it on and connect the Master Clock to the word clock input on the source equipment.
 5. Set the clocking sync mode on the unit to Word Clock 1-2 Auto.
 - ▶ For more information, see "Setting the clocking sync mode" on page 34.
- The LINA Network DAC selects the appropriate clock input and locks to it.

Using Power Link

Power Link allows you to switch other units in the LINA range on and off at the same time.

To enable Power Link, use two RJ45 cables to connect the POWER LINK sockets on each unit.

Using the dCS remote control

Inserting the remote control batteries

The remote control uses 2 x AAA batteries.

1. Remove the battery cover on the base of the remote control by rotating the lock anti-clockwise.
2. Insert new batteries ensuring the + or – aligns with the marking shown inside the battery compartment.
3. Replace the battery cover and rotate the lock clockwise to secure.

Remote control buttons

Button	Description
POWER	To toggle the LINA DAC X in and out of sleep mode, press briefly. To power off the LINA DAC X, press and hold down this button.
	To power on the LINA DAC X, press the physical power button on the front of the unit. ▶ For more information, see "Front" on page 8.
SOURCE	Toggles through available sources.
MUTE	Mutes the volume.
VOL +	Increase the volume.
VOL -	Decrease the volume.
MENU	Opens the menu.
<	Navigates options to the left or adjusts level to left when in the balance setting.
>	Navigates options to the right or adjusts level to right when in the balance setting.
EXIT	Exits menu.
ENTER	Select the menu option.
▶	Toggles between playing and pausing.
⏮	Plays the previous track.
⏭	Plays the next track.

Button	Description
	Toggles the setting of the assigned touch button shortcut (3). ▶ For more information, see "Changing the shortcut buttons" on page 30.
	Toggles the setting of the assigned touch button shortcut (5). ▶ For more information, see "Changing the shortcut buttons" on page 30.
PHASE	Toggles phase setting. ▶ For more information, see "Changing the absolute phase of analogue outputs" on page 33.
FILTER	Toggles through available filters.

NOTICE

If your remote control stops working, check the following:

- Ensure that the remote control setting is set to use the remote control.
▶ For more information, see "Changing the infrared remote control settings" on page 38.
- Ensure that the batteries are charged, and inserted correctly.
▶ For more information, see "Inserting the remote control batteries" on the previous page.
- Ensure there is a clear line of sight between the remote control and the unit when operating.

dCS Mosaic

dCS Mosaic is a bespoke collection of hardware and software modules that allow you to access your digital music. With dCS Mosaic, you can stream content from the following:

- Internet services, such as Spotify, TIDAL, Qobuz and Deezer
- Internet Radio
- Podcasts via Airable

The Mosaic Control app

Mosaic Control is an app for your iOS or Android mobile device. With the Mosaic Control app you have access to a vast library of music through a simple, yet powerful interface. You can use the app to:

- Browse media from various streaming services
- Manage settings and configuration options for your dCS products

To download the Mosaic Control app, visit the app store on your iOS or Android device and search for dCS Mosaic.



Help using the Mosaic Control app

To view the User Guide for the Mosaic Control app, visit <https://dcs.community/t/dcs-mosaic-user-guide/>

Using the LINA DAC X

Changing the source input

You can cycle through the available source inputs using the menu.

1. Tap .
2. Tap .
3. Tap  to change the input.

Each time that you tap the button, it advances through the list of available inputs.

Icon	Input name
	NETWORK
	AES 1
	AES 2
	DUAL AES
	SPDIF 1
	SPDIF 2
	SPDIF 3
	USB 1

-  If a USB flash drive is connected to the USB 2 socket, the unit treats it as a network drive. Select the input using the Mosaic Control app.
-  If Dual AES is disabled, **DUAL AES** is not shown in the list of inputs.
 - ▶ For more information, see "Enabling and disabling Dual AES" on page 35.
-  Streaming a track from the network automatically selects the network input.

Playing music from streaming services

You can use the Mosaic Control app to play music from online streaming services, such as Spotify, TIDAL, Qobuz, and Deezer. You can also listen to Internet Radio, and podcasts via Airable.

- ▶ For more information, see "dCS Mosaic" on the previous page.

About MQA files

MQA (Master Quality Authenticated) is an award-winning British technology that delivers the sound of the original master recording. The master MQA file is fully authenticated and is small enough to stream or download. Your LINA DAC X features a full MQA decoder.

For more information about MQA technology, see www.mqa.co.uk



MQA files that are streamed bit-perfect using a network connection or from the *USB 2* socket are extracted and rendered to the original sample rate. The decoded sample rate is shown on the display.

MQA files extracted by another device to *24/88.2* or *24/96* and then presented bit-perfect to the *USB 1*, *AES 1*, *AES 2*, *SPDIF 1*, *SPDIF 2*, or *SPDIF 3* sockets are rendered to the original sample rate.

When listening to MQA files using a network connection, the Mosaic Control app displays the type of MQA stream.

Icon	Description
	Indicates that the unit is decoding and playing an MQA stream or file, and denotes provenance to ensure that the sound is identical to that of the source material.
	Indicates that the unit is playing an MQA Studio file, which has either been approved in the studio by the artist/producer or has been verified by the copyright owner.
	Indicates that the product is receiving an MQA stream or file. This delivers the final unfold of the MQA file and displays the original sample rate.

NOTICE

If the original data in an MQA file has changed, the unit cannot decode the file.

For files to be identified as containing MQA audio and sent to the MQA decoder for authentication, the metadata in the file must include the correct MQA tags. If the metadata of an MQA file has been changed, removed or was never present (for example if the files were ripped from an MQA-encoded CD), the files will not be recognised and decoded.

To fix the metadata of MQA files, use the MQA Tag Renaming application. The application reads the MQA markers in the bit stream and applies the appropriate metadata tags to the files. For more information on the MQA Tag Renaming application, see:

<https://www.mqa.co.uk/customer/tag435sdf43te>.

The MQA logo is a trademark of MQA Limited and is used under licence. MQA and the Sound Wave Device are registered trademarks of MQA Limited © 2016.

Using Spotify Connect

Use your phone, tablet or computer as a remote control for Spotify.

Go to spotify.com/connect to learn how.



The Spotify software is subject to third-party licences. For more information, see: <https://developer.spotify.com/third-party-licenses>.

Using Roon

The LINA DAC X system is Roon Ready.



Being Roon Ready means that your LINA DAC X uses Roon streaming technology, for an incredible user interface, simple setup, rock-solid daily reliability, and the highest levels of audio performance, without compromise.

If you have a Roon account, install Roon Core on your NAS drive or on a networked computer. You can then use Roon remote to control playback on your unit.

For more information about Roon, see <https://roonlabs.com/>

Using TIDAL Connect



TIDAL Connect allows TIDAL users to seamlessly play TIDAL content on a wide range of hardware devices.

1. Open the TIDAL app.
2. Choose the playlist, album, or song that you wish to send to your LINA DAC X Core.
3. Play a song.
4. Select **Now Playing**.
5. From the device selector, select your LINA DAC X Core.

For more information, see tidal.com/connect.

Using QQ Music



Open the QQ Music app on your phone to play your desired track.

Select your dCS device from the list of available playback devices within the QQ Music app. Enjoy streaming directly to your dCS device.

For more information, see <https://y.qq.com/>.

Playing music from a USB storage device

You can play music stored on a USB storage device. The connected USB device must be both of the following:

- A FAT32 or unencrypted NTFS formatted USB flash drive or USB pen drive with the suggested maximum size of 32 GB.

Low power USB Hard Discs or USB SSDs may work with the *USB 2* connection but are not supported.

NOTICE

Do not try to play non-audio files on the unit. If the unit stops responding, restart the unit.

To play music from a USB storage device:

1. At the rear of the unit, connect the USB storage device to the *USB 2* socket.
2. Open the Mosaic Control app and access the USB storage device.
3. Choose a song to play on the LINA DAC X.

Settings


You can change settings in the menu on the unit, or using the Mosaic Control app.

▶ For more information, see "dCS Mosaic" on page 23.

To change settings for the unit using the Mosaic Control app, select ☰ from the left of the screen on your mobile device.

Navigating the menu

To navigate the menu on the unit, tap the buttons below the display.

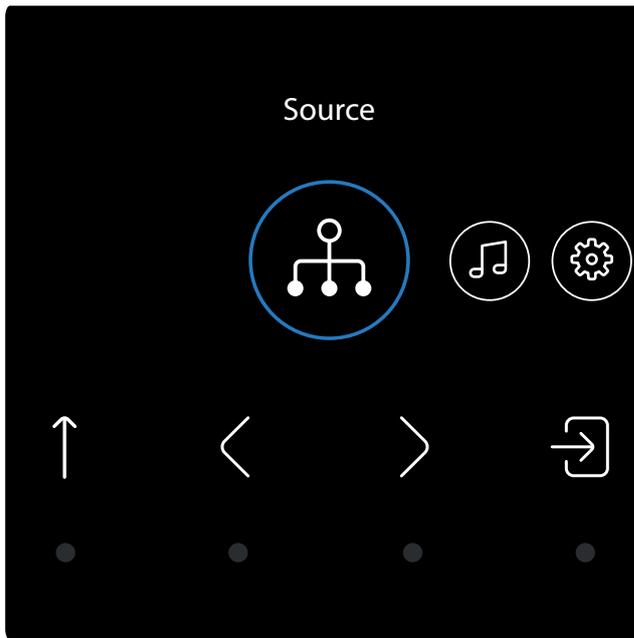

☰	Open the main menu	<	Move to the previous item
↑	Move up a level or exit the menu	>	Move to the next item
→	Enter or select		

Menu overview

The table below shows the menus and settings available on the unit.

Source 		NETWORK 	AES 1 	AES 2 	DUAL AES 	
		SPDIF 1 	SPDIF 2 	SPDIF 3 	USB 1 	
Processing 	Crossfeed 	Off 	Crossfeed 	Expanse 1 	Expanse 2 	
	Filter F1	Filter 1 F1	Filter 2 F2	Filter 3 F3	Filter 4 F4	Filter 5 F5
		Filter 6 F6	Filter M1 M1			
	DSD Filter F1 DSD	DSD F1 F1 DSD	DSD F2 F2 DSD	DSD F3 F3 DSD	DSD F4 F4 DSD	DSD F5 F5 DSD
	Upsampling 	DSD 	DXD 	DSDx2 		
	Mapper	M1 M1	M2 M2	M3 M3		
	Phase 	In phase 	Inverted 			
	Balance Control 	Left L	Right R			
Device Settings 	Volume Lock 	Locked 	Unlocked 			
	Sync Mode 	W Auto 	Audio 	Master 	W/C 1 	W/C 2 
	Dual AES 	Off 	On 	Auto 		
	USB Class 	Class 2 	Class 1 			
	Buffer 	Off 	On 			
	Line Output 2V	0.2V .2V	0.6V .6V	2V 2V	6V 6V	
	Text Size 	Small 	Large 			
	Display 	On 	Off 			

	Brightness 	1 - 15 	
	IR Control 	dCS Remote 	Remote disabled 
	Language 	English 	Chinese 
	Track info 	On 	Off 
	Factory Reset 		
Test 	Channel Check 		
	Burn In 		
Information 			

Changing the shortcut buttons

From the home screen, three of the touch buttons act as shortcut buttons. Tap these buttons to quickly change your favourite settings. The default shortcut buttons do the following:

- Change the input source.
- Toggle crossfeed on or off.
- Change the crossfeed setting.

When you unlock the volume control feature, the default shortcut buttons do the following:

- Change the input source.
- Change the volume.
- Mute/Unmute (for AES, SPDIF, or USB 2 input sources) or Play/Pause (for NETWORK or USB 1 input sources).

To choose a different shortcut action:

1. Touch and hold .
Three white, square reset icons appear on the display.
2. Tap the button for the shortcut you want to change to choose a different action.
3. Tap  to save changes.

Changing the crossfeed setting

Crossfeed is the process of blending left and right channels of a stereo audio recording, to help make audio sound more natural when played through headphones. The crossfeed setting that is most suitable for you and the music you are listening to may vary, so we recommend testing the different settings.

dCS Expanse

Expanse is the new patented crossfeed processing algorithm developed by dCS. It applies different processing filters to give two different responses: E1 and E2. With Expanse, there is a unique headphone listening experience for all listeners that stays true to the original recording.

1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to change the crossfeed setting.

	Crossfeed off. The two audio channels are presented to the headphones in the usual way.
	Crossfeed on. Some of the signal from one channel is filtered and mixed with the other channel to better imitate listening to loudspeakers in a room.
	Expanse filter 1.
	Expanse filter 2.

Changing the PCM filter

You can use the filter settings to change how music sounds when listening to PCM data. Filters are a personal choice. A different filter setting is stored for each sample rate.

1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to select **Filter**.
5. Tap  to change the PCM filter.

F1	Filter 1. The filter has the best rejection of unwanted Nyquist images with the sharpest roll-off, and the poorest transient response of the first four filters.
F2	Filter 2. The filter has a more relaxed image rejection and better transient response. Filter 2 is recommended for orchestral music.
F3	Filter 3. The filter has a more relaxed image rejection and better transient response than Filters 1 and 2. Filter 3 is recommended for rock music.
F4	Filter 4. The filter has the lowest image rejection and the best transient response of the first four filters.

F5	Filter 5. If the sample rate is 176.4, 192, 352.8, or 384 kS/s, the filter has a Gaussian response, which offers no overshoot on transients and a relaxed roll-off. If the sample rate is 44.1 kS/s, the filter is an asymmetrical design, which features almost no pre-ringing. If the sample rate is 48, 88.2 or 96 kS/s, Filter 5 is not available.
F6	Filter 6. If the sample rate is 176.4, 192, 352.8, or 384 kS/s, the filter is an asymmetrical design, which features almost no pre-ringing. If the sample rate is 44.1 kS/s, the filter is an alternative sharp filter, which has linear phase and pre-ringing. If the sample rate is 48, 88.2 or 96 kS/s, Filter 6 is not available.
M1	Filter M1. Recommended and only available for MQA audio files. You can select this filter in addition to the other PCM filters.

Changing the DSD filter

The DSD filter is active when you are playing DSD files or upsampling PCM data to DSD.

 If you are playing a DSD file or upsampling to DSD, and the level of hiss at the output is high, your amplifier may not work well with wideband DSD signals. Try setting the DSD filter to Filter 2 or 3.

1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to select **DSD Filter**.
5. Tap  to change the DSD filter.

F1 DSD	Filter 1. The default setting, which gives the widest bandwidth and the highest level of out-of-band noise.
F2 DSD	Filter 2. Reduces the out-of-band noise and bandwidth.
F3 DSD	Filter 3. Reduces the out-of-band noise and bandwidth further.
F4 DSD	Filter 4. Recommended for troubleshooting only. Sharply reduces the out-of-band noise and also limits the bandwidth to 25 kHz.
F5 DSD	Filter 5. Has a relaxed roll-off with a smoother phase response. Removes much of the out-of-band noise.

Changing the upsampling mode

You can select between two processing options when receiving PCM data. The best upsampling mode is a personal choice.

1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to select **Upsampling**.

5. Tap  to change the upsampling mode.

	DXD. The unit uses its standard PCM oversampling process for PCM data.
	DSD. The unit adds a DSD upsampling step before the end of the PCM oversampling process.
	DSDx2. The unit adds a DSDx2 upsampling step before the end of the PCM oversampling process.

Changing the mapper

The mapper controls how data is presented to the Ring DAC core. LINA DAC X includes three mapper designs.

1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to select **Mapper**.
5. Tap  to change the mapper.

M1	Mapper 1. The new default mapper design, which drives the Ring DAC core at either 5.644 or 6.14 MHz.
M2	Mapper 2. The classic mapper design, used on the first version of dCS products. This mapper design drives the Ring DAC core at either 2.822 or 3.07 MHz.
M3	Mapper 3. An alternative mapper design, which drives the Ring DAC core at either 5.644 or 6.14 MHz.

Changing the absolute phase of analogue outputs

When listening to music, if the character of the instruments sounds wrong then it may be because the track was recorded with both channels phase-inverted. You can correct the absolute phase of the outputs.

1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to select **Phase**.
5. Tap  to change between normal phase  and inverted phase .

This setting is reset when you next switch the unit on.

Adjusting the balance

You can adjust the audio balance.


1. Tap .
2. Tap  to select **Processing**.
3. Tap .
4. Tap  to select **Balance Control**.
5. Tap .
6. Use  and  to adjust the balance in 0.1 dB steps from 0 to -6 dB.
Mute is represented by $-\infty$.



Unlocking and locking volume control

You can lock the volume control so output level is fixed.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Volume Lock**.
5. Tap  to unlock or lock volume control.

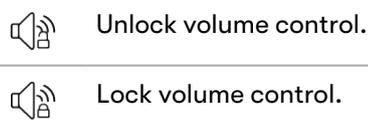

6. Confirm the setting change and restart your unit when prompted.

Setting the clocking sync mode

You can change the clocking sync mode for the current input. The sync mode setting is stored separately for each input.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .

4. Tap  to change the clocking sync mode.

 Master. The unit uses its internal clock to control data delivery from the network, computer or flash drive. For network and USB inputs only. This is the normal mode for these inputs when a Master Clock is not available.

 Audio. The unit locks to the data stream from the source equipment. Recommended for sources that do not have a suitable Word Clock input. For use with AES and SPDIF only, with sources that do not have a word clock input that is locked to the Master Clock.

 Word Clock 1-2 Auto. The unit automatically locks to the appropriate clock connected to the *WORDCLOCK* inputs. Recommended for systems with a Master Clock in a computer audio system, as the data rate of the music may keep changing.

- Connect the *WORDCLOCK IN 1* input to a Master Clock output set to 44.1, 88.2, or 176.4 kHz.
- Connect the *WORDCLOCK IN 2* input to a Master Clock output set to 48, 96, or 192 kHz.

 Word Clock In 1. The unit locks to an external clock connected to *WORDCLOCK IN 1*.

 Word Clock In 2. The unit locks to an external clock connected to *WORDCLOCK IN 2*.



If the unit cannot find a word clock that is synchronous with the data on the current AES or SPDIF input, it defaults to audio sync. The incorrect clock icon  is displayed.

Enabling and disabling Dual AES

You can set the AES inputs to be used together to accept PCM data at over 88.2 kS/s or DSD in DoP format from a Dual AES source.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Dual AES**.
5. Tap  to change the setting.

 Off. Disables Dual AES. Each AES input accepts single AES data.

 On. Enables manual selection between Single AES or Dual AES.

 Auto. This is the recommended setting. The unit detects the data format and automatically selects Single or Dual AES.

Setting the USB audio class

The USB1 socket supports two audio classes: Class 1 and Class 2.

NOTICE

Before changing the USB audio class, stop playback and close any relevant audio applications on the connected computer.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **USB Class**.
5. Tap  to set the USB audio class.

After you select a different audio class, wait for 10 seconds while the USB software reloads.

Enabling and disabling the buffer

By default, there is a buffer delay in the unit. This delay gives the unit time to mute before you hear audible clicks caused by changes in sample rate or clock frequency. The delay is 0.72 seconds with 44.1 kS/s data, and 0.16 seconds with 192 kS/s data.

If the unit is connected to a television or video equipment, you may need to disable the buffer to keep the sound in sync with the picture.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Buffer**.
5. Tap  to enable or disable the buffer.

 Buffer on

 Buffer off

Changing the line output level


The line output setting sets the maximum output level to suit your integrated amplifier or preamplifier.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Line Output**.
5. Tap  to change between 0.2 V, 0.6 V, 2 V, or 6 V.

Changing the text size

To help see information on the display from a distance, you can change the size of the track title text.


1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Text Size**.
5. Tap  to change the text size.

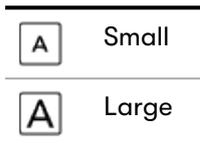

Turning off the display

When the display setting is set to off and you close the menu, the display turns off after a few seconds. You can then tap any button to turn on the display briefly. The display stays on while the menu is open.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Display**.
5. Tap  to change the display setting.

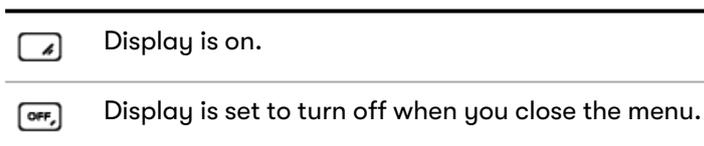

Changing the display brightness


You can change the display brightness.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Brightness**.
5. Tap .
6. Tap  or  to change the display brightness.

Changing the infrared remote control settings

You can choose to control LINA DAC X with the supplied dCS remote control. You can also turn off the Infrared (IR) control.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **IR Control**.
5. Tap  to change the remote control setting.

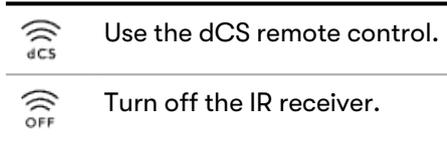

Resetting to factory conditions

You can reset the settings to factory conditions.

1. Tap .
2. Tap  to select **Device Settings**.
3. Tap .
4. Tap  to select **Factory Reset**.
5. Tap  to reset to factory conditions.

The default settings are below.

Setting	Default value
Source	NETWORK
Crossfeed	Off
Filter	Filter 1 for all sample rates
DSD Filter	Filter 1
Upsampling	DXD
Mapper	Mapper 1
Phase	Normal
Balance Control	Set to centre
Volume Lock	Off, -30 dB
Sync Mode	Word Clock Auto for Network and USB Audio for AES / SPDIF
Dual AES	Auto
USB Class	Class 2

Setting	Default value
Buffer	On
Line Output	2V
Text Size	Large
Display	On
Brightness	10
IR Control	dCS

Testing for swapped channels

You can test the system for swapped channels.

1. Tap .
2. Tap  to select **Channel Check**.
3. Tap .
4. Tap  to start the test.

The unit outputs a tone on the left channel and then the right channel. If what you hear does not match what is shown on the display, check the connections and other equipment for swapped channels.

Conditioning the unit

You can run a procedure to condition the unit. The system outputs modulated pink noise that increases and decreases.

NOTICE

Conditioning the unit at high volumes can damage amplifiers and loudspeakers. Before conditioning the unit, reduce the volume to a low level. dCS is not liable for any damage to equipment due to incorrect use of the conditioning feature.

1. Tap .
2. Tap  to select **Test**.
3. Tap .
4. Tap  to select **Burn In**.
5. Tap  to start conditioning the unit.
6. After conditioning has started, increase the amplifier volume to a sensible level.
7. Tap any button to stop conditioning the unit.

Viewing information about the unit

Information about the unit can help you solve setup or connection errors.

1. Tap .
2. Tap  or  to select **Information**.
3. Tap  to view information and use  and  to page up and down.



Unit status. Displays the unit status, including:

- Serial number
- The frequency detected on each word clock input
- The sample rate detected on each input
- USB 1 audio class
- IP address



Version. Displays the control board version and Mosaic processor version.

Updating the software

You can update the software on the LINA DAC X using the Mosaic Control app.

1. On your mobile device, open the Mosaic Control app.
2. Select  > **SUPPORT** > **Versions** > **Check for updates**.
3. If an update is available, follow the instructions to complete the update.

NOTICE

A software update can take up to 45 minutes. Do not switch off the unit until the software update is confirmed on the display.

Maintenance

dCS audio products do not need regular maintenance. The only user-serviceable part of the unit is the mains fuse. If the unit is damaged, contact your fulfilment centre.

Replacing a blown mains fuse

There is a fuse within the unit's power inlet. If the fuse blows, you can replace it.

- If the fuse blows once, replace the fuse. There was a power surge.
- If the fuse blows repeatedly, contact your fulfilment centre to arrange repair. There is a fault in the unit.

Fuse type: 20 x 5 mm, T 1A L / 250 V




WARNING


Replace the fuse with one of the same type and rating. If you use a fuse of a different type or rating, it may damage the unit and there is a risk of fire or electric shock. It also invalidates the warranty.

To replace a blown mains fuse:

1. Unplug the power cable from the unit.
2. Next to the power rocker switch, push the two tabs of the fuse holder towards the centre and pull out the fuse holder.

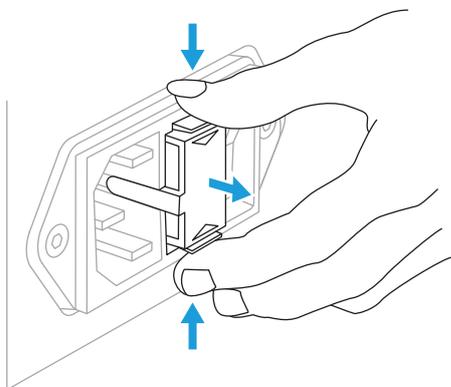


3. Remove the blown fuse from the lower position of the fuse holder.

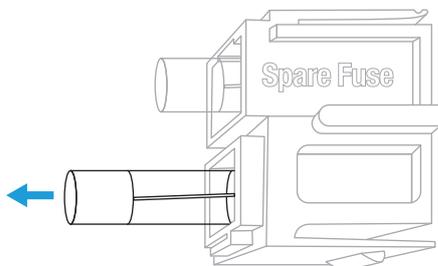

4. Replace the blown fuse with the spare fuse from the upper position.

5. Push the fuse holder back into the unit with the writing the correct way up, until you hear a click.

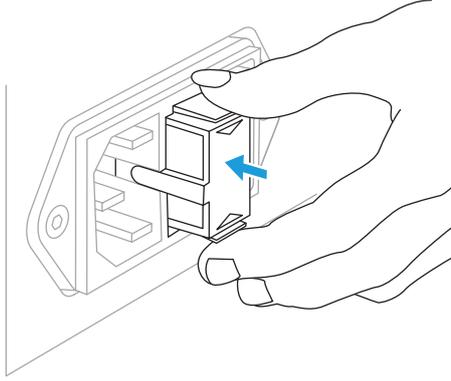

Cleaning the unit

- To remove fingerprints and loose dust, use a clean and dry lint-free cloth.
- To clean any other surfaces, such as the display, use a small amount of glass cleaner containing ammonia and a lint-free cloth. Do not spray glass cleaner directly onto the connector contacts.

Specifications



These specifications are subject to change without notice.

Converter type	dCS proprietary Ring DAC topology.
Sample rates	Compatible PCM rates are up to 24 bits at 44.1 kS/s, 48 kS/s, 88.2 kS/s, 96 kS/s, 176.4 kS/s, 192 kS/s, 352.8 kS/s or 384 kS/s. Compatible DSD rates are DSD/64 and DSD/128.
Digital inputs	<p>UPnP Network interface on an RJ45 connector streams music files from a NAS or local computer using MinimServer over an ethernet network. Supports PCM data up to 384 kS/s, or DSD up to DSD/128. Operates in Asynchronous mode.</p> <hr/> <p>1x USB 2.0 client interface on type-B connector:</p> <ul style="list-style-type: none"> • Supports PCM data up to 384 kS/s, or DSD in DoP format up to DSD/128. • Operates in Asynchronous USB mode. <hr/> <p>1x USB 2.0 host interface on type-B connector:</p> <ul style="list-style-type: none"> • Supports PCM data up to 384 kS/s, or DSD up to DSD/128. • Streams audio files from a USB flash drive. • Maximum power delivery is 2.1 A at 5 V DC. • Operates in Asynchronous USB mode. <hr/> <p>2x AES/EBU on 2x 3-pin XLR connectors:</p> <ul style="list-style-type: none"> • Single AES: Supports PCM data up to 192 kS/s, or DSD/64 in DoP format. • Dual AES: Supports PCM data from 88.2 to 384 kS/s, or DSD in DoP format up to DSD/128. <hr/> <p>1x SPDIF on 1x BNC connector:</p> <ul style="list-style-type: none"> • Supports PCM data up to 192 kS/s, or DSD/64 in DoP format. <hr/> <p>1x SPDIF on 1x RCA connector:</p> <ul style="list-style-type: none"> • Supports PCM data up to 192 kS/s, or DSD/64 in DoP format. <hr/> <p>1x SPDIF on 1x TOSLINK connector:</p> <ul style="list-style-type: none"> • Supports PCM data up to 96 kS/s.
Supported file formats	<ul style="list-style-type: none"> • FLAC (supports PCM data up to 384 kS/s) • AIFF (supports PCM data up to 384 kS/s) • WAV (supports PCM data up to 384 kS/s) • ALAC (supports PCM data up to 192 kS/s) • AAC (supports PCM data up to 48 kS/s) • MP3 (supports PCM data up to 48 kS/s) • DFF, DSF and DoP (DSD/64 and DSD/128)

Supported network protocols	<ul style="list-style-type: none"> • UPnP • Airable • Spotify • Roon Ready • QQ Music <p>Supports TIDAL, Qobuz, Deezer, Internet Radio and Podcasts via Airable. The Network interface operates in Asynchronous mode.</p>																		
Clocking	<p>2x word clock input on 2x BNC connector:</p> <ul style="list-style-type: none"> • Accept standard word clocks at 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz or 192 kHz. • The data rate can be the same as the clock rate or an exact multiple (0.25x, 0.5x, 1x, 2x, 4x, 8x) of the clock rate. • Sensitive to TTL levels. 																		
MQA	<p>Full decoding and rendering of MQA data from the Network and the USB Type-A inputs. Final rendering of unfolded MQA data only from the other inputs.</p>																		
Frequency response (set to Filter 1)	<table> <tr> <td>$F_s = 44.1$ or 48 kS/s</td> <td>+/-0.1 dB, 10 Hz to 20 kHz</td> <td></td> </tr> <tr> <td>$F_s = 88.2$ or 96 kS/s</td> <td>+/-0.1 dB, 10 Hz to 20 kHz</td> <td>-3 dB @ >38 kHz</td> </tr> <tr> <td>$F_s = 176.4$ or 192 kS/s</td> <td>+/-0.1 dB, 10 Hz to 20 kHz</td> <td>-3 dB @ >67 kHz</td> </tr> <tr> <td>$F_s = 352.8$ or 384 kS/s</td> <td>+/-0.1 dB, 10 Hz to 20 kHz</td> <td>-3 dB @ >100 kHz</td> </tr> <tr> <td>DSD64</td> <td>+/-0.1 dB, 10 Hz to 20 kHz</td> <td>-3 dB @ >90 kHz</td> </tr> <tr> <td>DSD128</td> <td>+/-0.1 dB, 10 Hz to 20 kHz</td> <td>-3 dB @ >100 kHz</td> </tr> </table>	$F_s = 44.1$ or 48 kS/s	+/-0.1 dB, 10 Hz to 20 kHz		$F_s = 88.2$ or 96 kS/s	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >38 kHz	$F_s = 176.4$ or 192 kS/s	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >67 kHz	$F_s = 352.8$ or 384 kS/s	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >100 kHz	DSD64	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >90 kHz	DSD128	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >100 kHz
$F_s = 44.1$ or 48 kS/s	+/-0.1 dB, 10 Hz to 20 kHz																		
$F_s = 88.2$ or 96 kS/s	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >38 kHz																	
$F_s = 176.4$ or 192 kS/s	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >67 kHz																	
$F_s = 352.8$ or 384 kS/s	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >100 kHz																	
DSD64	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >90 kHz																	
DSD128	+/-0.1 dB, 10 Hz to 20 kHz	-3 dB @ >100 kHz																	
Residual noise (6V output setting)	<p>16-bit data: Better than -96 dB0, 20 Hz - 20 kHz unweighted. 24-bit data: Better than -113 dB0, 20 Hz - 20 kHz unweighted.</p>																		
Upsampling	<p>Multi-stage DXD oversampling with switchable DSD upsampling (1-bit 2.822 or 3.07 MS/s) and DSDx2 upsampling (1-bit 5.644 or 6.14 MS/s).</p>																		
Spurious responses	<p>Better than -105 dB0, 20 Hz - 20 kHz.</p>																		
L-R crosstalk	<p>Better than -115 dB0, 20 Hz - 20 kHz.</p>																		
Line outputs	<p>1 stereo balanced pair on 2x 3-pin male XLR connectors (pin 2 = hot, pin 3 = cold). These outputs are electronically balanced and floating, the signal balance ratio at 1 kHz is better than 40 dB. Output impedance is 3 Ω, maximum load is 600Ω (a 10 kΩ - 100 kΩ load is recommended). 1 stereo unbalanced pair on 2x RCA Phono connectors. Output impedance is 52 Ω, maximum load is 600 Ω (a 10 kΩ - 100 kΩ load is recommended). Output levels are 0.2V, 0.6V, 2V, or 6V rms for a full-scale input, set in the menu.</p>																		
Product dimensions	<p>122 mm (H) x 444 mm (W) x 356 mm (D)</p>																		
Product weight	<p>14 kg</p>																		
Power requirements	<p>90-127 V / 220-240 V, 50/60 Hz Power consumption: 30 W</p>																		
Operating conditions	<p>Supply voltage: within +/-10% of the A.C. voltage specified on the back panel. Supply frequency: 49 Hz to 62 Hz. Ambient temperature range: 0°C (32°F) to 45°C (113°F), non-condensing.</p>																		

NOTICE

Do not install the unit near heat sources such as radiators, air ducts, power amplifiers or direct strong sunlight.

This page is intentionally blank.

Support

If you need help using your LINA DAC X, contact your fulfilment centre for assistance, quoting the serial number of your unit.

Manufactured by:

Data Conversion Systems Ltd.
Unit 1, Buckingway Business Park,
Anderson Road,
Swavesey,
Cambridgeshire,
CB24 4AE,
UK

www.dcsaudio.com

dcsaudio.com | [@dCsonlythemusic](https://www.instagram.com/dcsonlythemusic) | info@dcsaudio.com

Data Conversion Systems Ltd.
Unit 1, Buckingway Business Park, Anderson Road,
Swavesey, Cambridge, CB24 4AE, UK



dCS
ONLY THE MUSIC